



USER MANUAL

SuperSign Control+

CONTENTS

SUPERSIGN CONTROL+3

- SuperSign Control+ Components.....3
 - SuperSign Control+ Manager
 - SuperSign Control+ Agent
- System Requirements.....4
 - SuperSign Control+ Manager
 - SuperSign Control+ Agent
- SuperSign Control+ Components.....5
 - Connection through RS-232C

SUPERSIGN CONTROL+ INSTALLATION AND COMPONENTS6

- SW Installation.....6
 - SuperSign Control+
 - SuperSign Control+ Agent

MANAGER FUNCTION DETAILS 11

- Login 11
 - Change the Default Password
- Dashboard..... 13
- Signage Management 15
 - Thumbnail View
 - List View
 - Keyword Search
 - Group Management
 - Search Device
 - Status Filter
 - View Type/Signage List
 - Unapproved Devices
 - Column Filter
 - Signage Popup
 - Multi Control
 - Multi Signage Popup
- Template50
 - New Schedule
 - Edit List of Devices
- Settings.....53
 - Trouble Notice
 - Account Management
 - Error Reporting
 - Update
 - Config
 - Information

AGENT FEATURES 63

- Information on Used Port

SUPERSIGN CONTROL+

The SuperSign Control+ software is designed to manage and control Signage products from LG Electronics. You can monitor, control and manage Agents (set-top box) and Signage products connected through SuperSign Control+. This is a management program to monitor and control a PC (set-top box) with the Signage, which supports SuperSign Control+, or SuperSign Control+ Agent installed and a Signage connected thereto.

SuperSign Control+ Components

SuperSign Control+ Manager

- 1 This is a management program to monitor and control a PC (set-top box) with the SuperSign Control+ Agent installed and a Signage product connected thereto.
- 2 The program determines an error in each model of PCs and Signage products, and, when an error occurs, it sends a notification to an administrator.
- 3 You can control Signage products and the PC using SuperSign Control+ Agent which is remotely connected.

SuperSign Control+ Agent

- 1 This is a program to be installed on the Signage or a PC physically connected to the Signage.
- 2 This program monitors the status of the PC and Signage on a regular basis and transmits the information to SuperSign Control+ Manager.

System Requirements

SuperSign Control+ Manager

Hardware

RAM: 16 GB (DDR3) or higher
 CPU: Intel Xeon E5-2600 Series V3 8 Core or higher
 DISK: 100 GB or higher
 Network: 100 Mbps or higher

Software

Node.js v8.9.4
 PostgreSQL v10.1
 Erlang OTP v20.2(9.2)
 RabbitMQ v3.7.3
 Chrome Browser v53 or higher
 Redis v3.0.504

System

Windows Server 2012 (Windows 7) 64bit Platform
 Windows 10 64bit Platform

SuperSign Control+ Agent

Hardware

RAM: 2 GB (DDR3) or higher
 CPU: 2.40 GHz, 4 Core or higher
 Network: 100 Mbps or higher

Software

.Net Framework 4.5
 Microsoft Visual C++ 2017 Redistributable (x86)
 Redis v3.0.504


System

Windows Server 2012 (Windows 7) 64bit Platform
 Windows 10 64bit

NOTE

- When the required software is not installed, it is additionally installed during installation of the SuperSign Control+.
 (The default settings are recommended.)
- The SuperSign Control+ Agent supports only the environment using IPv4.

SuperSign Control+ Components

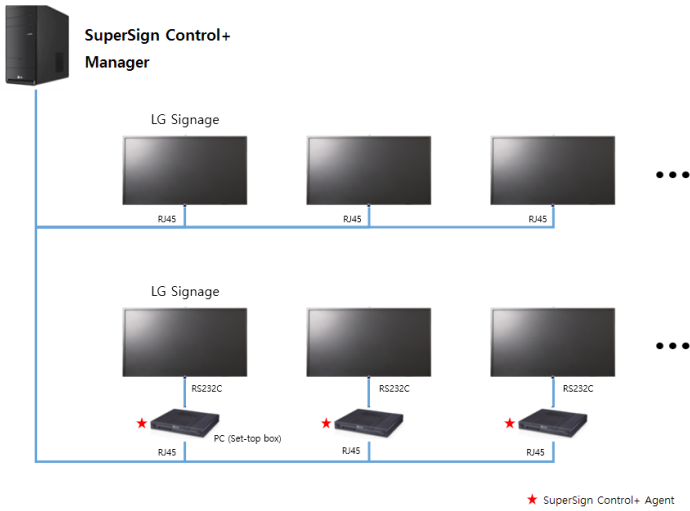

Connection through RS-232C


A PC with the SuperSign Control+ Agent installed must be connected to the LG Signage product through RS-232C cables. If the PC is connected through an OPS terminal, the interface of the display must be set to OPS.

SUPERSIGN CONTROL+ INSTALLATION AND COMPONENTS

SW Installation

SuperSign Control+

- 1 Run the Setup.exe file of the SuperSign Control+ that you have downloaded.
- 2 When the Installer Language window appears, select the language of the Setup Wizard, and click [OK].

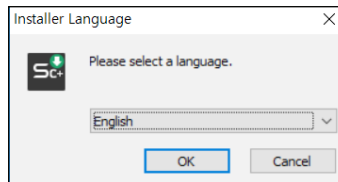


CAUTION

- If the operating system is not Windows Server 2012 (Windows 7) 64 bit or higher, the following popup will appear, and the installation will end.


If the environment is not a 64-bit version




If the operating system is other than a Windows Server 2012 (Windows 7) or later

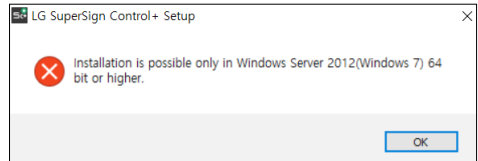





- 3 When the Setup Wizard window appears, click [Next].

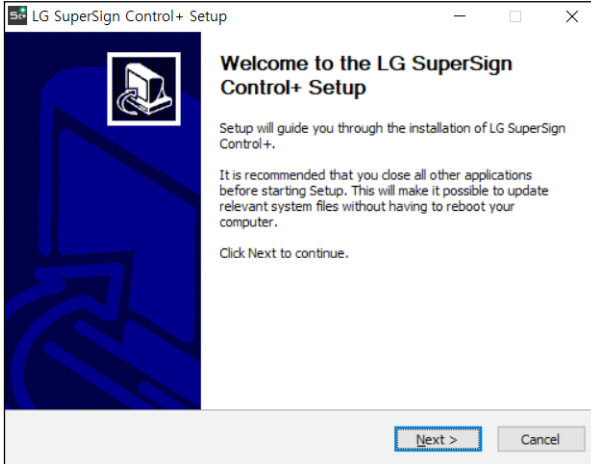


- 4 Accept the Terms and Conditions and click [I Agree]. When you click [I Agree], the program installation proceeds.

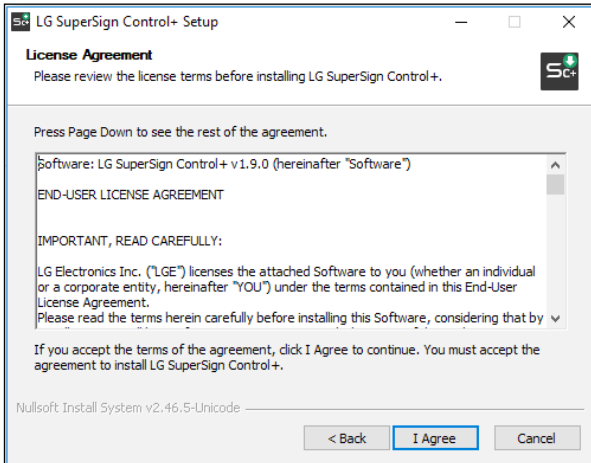


- 5 During installation, if the required software (please refer to 2.1.) is not installed, its installation also proceeds. In this case, the default settings are recommended for the installation. If the required software fails to be normally installed, the SuperSign Control+ Server may not work properly.

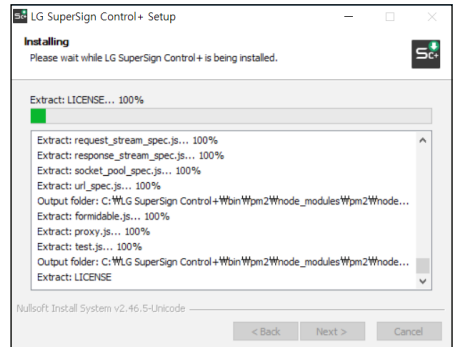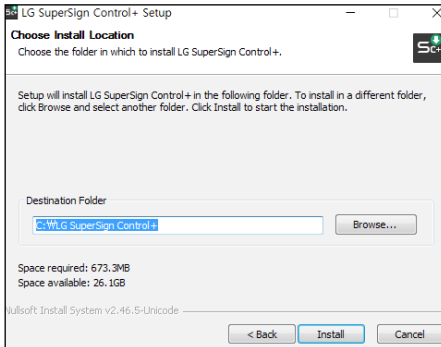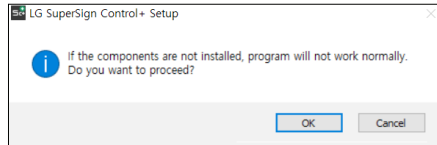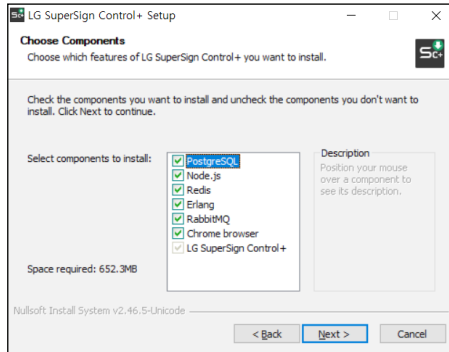

- 6 When the installation is completed, click [Next]. Then, check whether to generate a shortcut of the SuperSign Control+ Server and click [Finish].

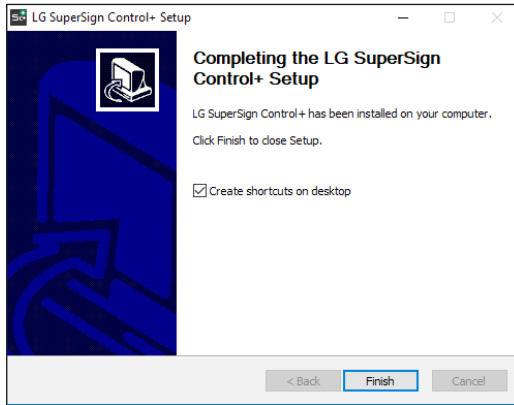


- 7 After that, the program will ask you whether to reboot right away for finishing the installation completely.

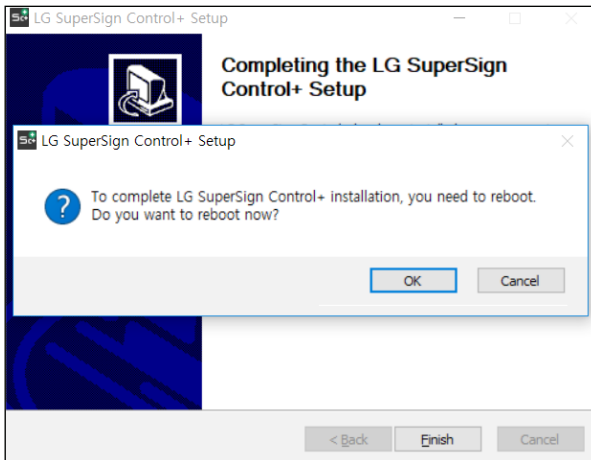

SuperSign Control+ Agent

- 1 Run the Setup.exe file of the SuperSign Control+ Agent that you have downloaded. The installation of the Agent will start automatically with the below popup window.

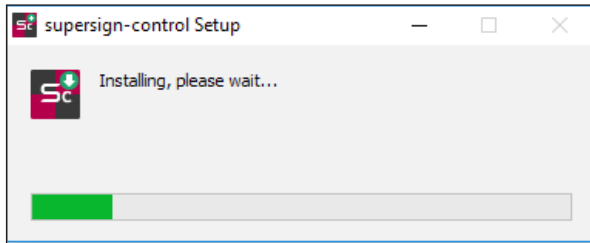

- 2 When the installation is completed, the Agent will automatically run, which you can check via the tray icon on a lower right side of the window.

MANAGER FUNCTION DETAILS

Login

LG SuperSign Manager

LOGIN

1 Language

2 ID

3 Password

4 Auto Login


5 Login

No.	Item	Description
1	Language	You can select English or Korean as your language.
2	User ID	Enter your user ID here. The default user ID is 'admin.'
3	Password	Enter the password for the user ID here. The default password for the ID 'admin' is '000000.'
4	Auto Login	Check here to use an automatic login when you access the program next time.
5	Login	You get logged in with the entered ID and password.

! NOTE

- If the ID and password entered do not match the required ID and password, you cannot log in.
- If you want to undo the [Auto Login] during the process, you need to manually log out.

Change the Default Password

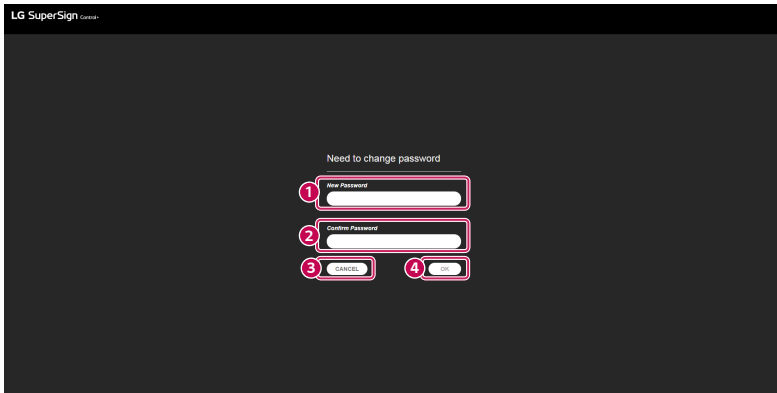

No.	Item	Description
1	New Password	Enter a new password. The password must be 8-20 characters and contain alphanumeric characters, numbers, and special characters.
2	Confirm Password	Enter the same password as 1.
3	Cancel	Cancel the change in the password.
4	OK	Change to the entered password.

Dashboard

The screenshot shows the LG SuperSign Control Dashboard. At the top, there is a navigation bar with three tabs: 'Dashboard' (1), 'Signage Management' (2), and 'Template' (3). On the right side of the navigation bar, there are buttons for 'User Name' (4), 'Settings' (5), and 'Logout' (6). Below the navigation bar is the 'System Info Summary (Total: 5)' section, which contains five status cards: 'Online' (3) (7), 'Offline' (2) (2), 'OK' (2) (3), 'Warning' (2) (4), and 'Error' (1) (5). Below this are two tables: 'Issue History' (8) and 'Top 10 Issue Signage' (9). The 'Issue History' table has columns for Signage Name (IP), Group, Type, Issue, Status, and Occurred Time. The 'Top 10 Issue Signage' table has columns for Signage Name (IP), Error, and Warning.

No.	Item	Description
1	Dashboard	Click to move to the Dashboard tab.
2	Signage Management	Click to move to the Signage Management tab.
3	Template	Click it to move to the Template Management tab.
4	User Name	Show the user name that is currently logged in.
5	Settings	Click to view the Setup window.
6	Logout	When clicked, the current user will be logged out.
7	System Info Summary	Show the number of Signages in the status of OK, Warning, and Error.
8	Issue History	Show a log on issues including Warning, Error, Disconnected, and Connection.
9	Top 10 Issues with Signages	Show the name of the Signage product that has the most issues during a selected period and the number of errors/warnings.

System Info Summary

Show the number of the Signages in the status of Online, Offline, OK, Warning, or Error.

- 1 If you go to SuperSign Control+ > Dashboard > System Info Summary and click [Online], you will be directed to the Signage Management screen. The Signage Management screen displays which Signages are in the Online status.
- 2 If you go to SuperSign Control+ > Dashboard > System Info Summary and click [Offline], you will be directed to the Signage Management screen. The Signage Management screen displays which Signages are in the Offline status.
- 3 If you go to SuperSign Control+ > Dashboard > System Info Summary and click [OK], you will be directed to the Signage Management screen. The Signage Management screen displays which Signage products are in the OK status.
- 4 If you go to SuperSign Control+ > Dashboard > System Info Summary and click [Warning], you will be directed to the Signage Management screen. The Signage Management screen displays which Signage products are in the Warning status.
- 5 If you go to SuperSign Control+ > Dashboard > System Info Summary and click [Error], you will be directed to the Signage Management screen. The Signage Management screen displays which Signage products are in the Error status.

Issue History

Show the history of status (Warning, Error, and Connection) of the Signage product.

- 1 When the status of the registered Signage changes, the history of the change is added to the list in the format as "Signage Name (IP)/Group/Type/issue/Status/Occurred Time".
- 2 History Period Settings: You can view the history of the Signage for a selected period such as Today, Last 7 Days, Last 30 Days, and Last 100 Days.
- 3 History Page Settings: You can select to display 10, 25, or 100 history items on a single page.
- 4 Move to History Page: You can move to the previous/next page by clicking icons in the shapes of right and left angle brackets. ("The first history number of the current page" - "the last history number of the current page" of "the total number of histories")

Top 10 Issues with Signages

Show the name of the Signage product that has the most issues during a selected period and the number of errors/warnings.

- 1 Period Settings: You can view a list of the top 10 Signages with the most issues that have occurred in a selected period among Today, Last 7 Days, Last 30 Days, and Last 100 Days. When you click Refresh, the period will be initialized into "Today".
- 2 When you click [More] on the list, a Signage popup showing the information about the Signage appears.

Signage Management

Thumbnail View

The screenshot shows the 'Signage Management' interface in 'Thumbnail View'. The top navigation bar includes 'Dashboard', 'Signage Management', and 'Template'. The main content area displays two device thumbnails, each with a 'LG SIGNAGE' label and 'Unassigned' status. The interface is annotated with red circles and numbers 1 through 12, highlighting various UI elements like the search bar, navigation tabs, sidebar, and pagination controls.

List View


The screenshot shows the 'Signage Management' interface in 'List View'. The main content area displays a table with the following data:

THUMBNAIL	NAME	IP ADDRESS	MODEL NAME	SERIAL NUMBER	GROUP	STATUS
	LG SIGNAGE	192.168.0.9	4538SD	602LGP70000	Unassigned	🟢
	LG SIGNAGE	192.168.0.9	4538TE-0J	800PTL031000	Unassigned	🟢

The interface is annotated with a red circle and number 13, highlighting the status column. The bottom of the interface includes a 'Rows per page' dropdown and a status bar.


No.	Item	Description
1	Keyword Search	The Keyword Search feature enables you to easily find and manage the desired Signage, and a result of the application appears on the [Signage List].
2	Group Management	The menu to manage several Signage products as a group.
3	Multi Control	Used to simultaneously control several devices.
4	Search device	Used to search devices and to connect to the Control+ server.
5	Save List	Used to save information on the Signages in the [Signage List] as an Excel file.
6	Filter	This tab allows you to select a status among Online, Offline, OK, Warning, and Error. The result filtered by the selected status is displayed in the [Signage List].
7	View Type	This tab allows you to select one of the view types among [Large, Average, and Small]. The size of the Signage items in the [Signage List] changes into the selected type.
8	Unapproved Devices	Used to manage connected devices in the Waiting status.
9	Thumbnail View/List View	Used to manage the Thumbnail View mode and the List View mode.
10	Signage List	You can view the registered [Signage List], [Group Information], [Search Information], [Status Information], and [Control Information].
11	Rows per Page	You can set the number of devices viewed per page to be 15, 50, 100, or 1000.
12	Signage Status	You can view the total number of registered devices on the server and the number of filtered devices.
13	Column Filter	You can select the desired column of the List View to display the column.

Keyword Search

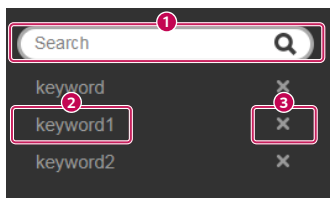


No.	Description
1	Search the name of the Signage, IP address, group name, model name, and serial number that match the keyword you entered. Enter desired keywords and click Enter to add keywords. The result is previewed in the Signage List while the user is entering keywords in the input window.
2	You can simultaneously enter up to three keywords.
3	If you want to exclude keywords from the search conditions, click X .

Group Management

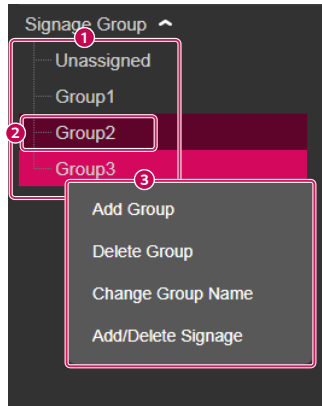

No.	Item	Description
1	Unassigned Group	This is a default group which may not be added, deleted, or modified and which includes the devices initially accessed. Or it is the group including the devices without a designated group.
2	Select Group	Select groups by right-clicking or left-clicking on the desired group and left click on the selected group to deselect the group. (Right clicking is to only select groups and is unavailable to deselect.) Devices in the selected group are shown in the list of devices. You can select multiple groups, but when you select/deselect a group, the child groups are automatically selected/deselected.
3	Control Group	Right clicking on the desired group shows the menu to control the group. <ul style="list-style-type: none"> - [Add Group]: A control is displayed to enter a group under the selected group. Enter a group name and click Enter to add a group. Press ESC to cancel the entry. - [Delete Group]: A popup window is displayed that allows you to delete all of the selected groups and its child groups. You can check the groups to delete on the list in the popup and delete them by clicking Confirm. All devices in the group will move to the Unassigned Group. - [Change Group Name]: A control to modify the name of the selected group appears. Enter a group name and click Enter to change the group name. If you press ESC, the change will be canceled. - [Add/Delete Signage]: A popup window to add a device to the selected group appears.

[Add/Delete Signage]

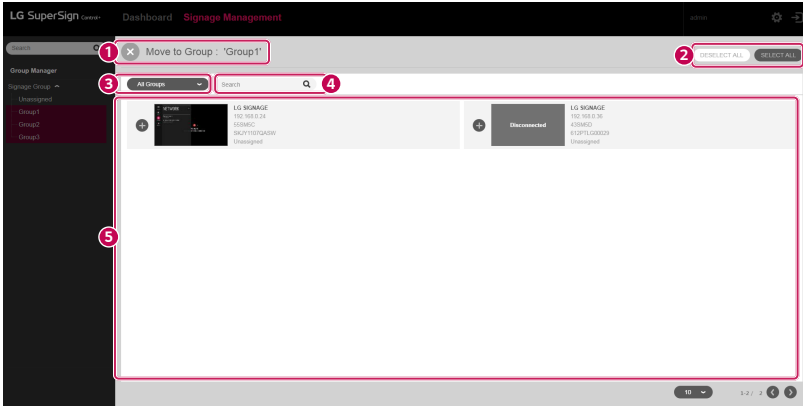

No.	Item	Description
①	Name of Group to Move	The name of the group that Signage products are moved to appears.
②	[SELECT ALL] / [DESELECT ALL]	Add all of the Signages shown in the [Signage List] to the corresponding group or delete all of them.
③	Group Filter	You can select one among All Groups, Unallocated, and Group List, and the Signages that meet the conditions appear in the [Signage List].
④	Keyword Search	A search feature which enables the user to easily find and manage desired Signage products is the same as the Keyword Search feature in the Search & Group tab.
⑤	Signage List	A list of Signage products searched by Group Filter and Keyword Search appears, and when you click on a Signage product, it is added to the corresponding group or deleted.

CAUTION

- When you click the selected Signage product to delete it, the group will change into "Unassigned Group".

Search Device

No.	Description
1	You can set the Auto or Manual Search type.
2	You can set the Secured or Unsecured Connection type.
3	It is activated only for manual search, and you can enter the desired range of IP address.


! NOTE

- In case of manual search, a red notification will be displayed in the required entry field.
- In case of auto device search, a search is available only within a range of router that belongs, and only webOS 3.2 or higher is supported.
- In case of secured connection, only webOS 4.0 or higher is supported.

Status Filter

All devices have the status properties of the device and connection properties of the network. (Status properties: OK/Warning/NG, Connection properties: Online/Offline)


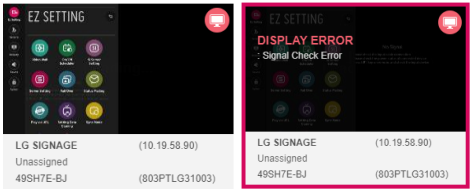
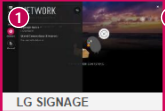

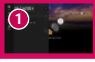
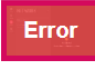
The Device List provides a filtering function based on the status.

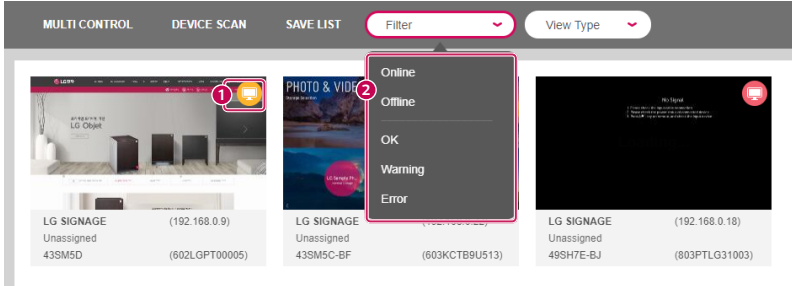



No.	Description		
1	An icon of the status appears on the right side of each thumbnail of the Signage List.		
	Status icon	Signage Type	Status
		Player	OK
		Player	Warning
		Player	Error
		Display	OK
		Display	Warning
		Display	Error
		Template Schedule	Template Schedule Registered
	* If the status is normal, the icon will not appear in the Thumbnail View.		
2	When you check each status, the Signage products with the corresponding status will appear in the list.		

View Type/Signage List

If a Signage is registered, the Signages registered will appear in the Signage Management window. You can select between Thumbnail View/List View via the button on the upper right side. In the Thumbnail View, a box-shaped component appears on the list. The Signage List is shown in different sizes according to its View Type, and the number of Signages shown on the screen changes accordingly. The List View shows a list-type component, and you can control the columns of the list via the filter on the upper right side.

[BIG] When you hover over a Signage product, details of the problem are displayed.	
For a normal status	When there is a problem
 <p>1 EZ SETTING</p> <p>2 LG SIGNAGE (10.19.58.90) Unassigned 49SH7E-BJ (803PTLG31003)</p>	 <p>1 EZ SETTING</p> <p>2 LG SIGNAGE (10.19.58.90) Unassigned 49SH7E-BJ (803PTLG31003)</p> <p>LG SIGNAGE (10.19.58.90) Unassigned 49SH7E-BJ (803PTLG31003)</p> <p>DISPLAY ERROR : Signal Check Error</p>
[MEDIUM] When you hover over a Signage product, information is displayed.	
For a normal status	When there is a problem
 <p>1 WORK</p> <p>2 Signage Name: LG SIGNAGE IP: 192.168.0.24 Group: Unassigned Model Name: 55SM5C Serial Number: SKJY1107QASW</p> <p>LG SIGNAGE</p>	 <p>1 Error</p> <p>2 Signage Name: LG SIGNAGE IP: 192.168.0.24 Group: Unassigned Model Name: 55SM5C Serial Number: SKJY1107QASW DISPLAY ERROR : Signal Check Error</p> <p>LG SIGNAGE</p>
When you hover over [SMALL] with a mouse, the information will be displayed.	
For a normal status	When there is a problem
 <p>1 WORK</p> <p>2 Signage Name: LG SIGNAGE IP: 192.168.0.24 Group: Unassigned Model Name: 55SM5C Serial Number: SKJY1107QASW</p>	 <p>1 Error</p> <p>2 Signage Name: LG SIGNAGE IP: 192.168.0.24 Group: Unassigned Model Name: 55SM5C Serial Number: SKJY1107QASW DISPLAY ERROR : Signal Check Error</p>


When you hover over [List View] with a mouse, the information will be displayed.

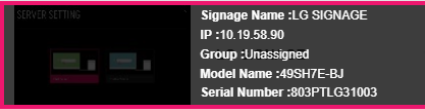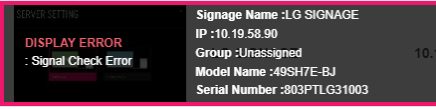For a normal status	When there is a problem
	

No.	Item	Description
①	Thumbnail Image	A thumbnail of the screen displayed on the Signage product appears.
②	Signage Information	The Signage Name, IP Address, Group Name, Model Name, and Serial Number are displayed.

Unapproved Devices

You can check the unapproved devices in the list of the unapproved devices.

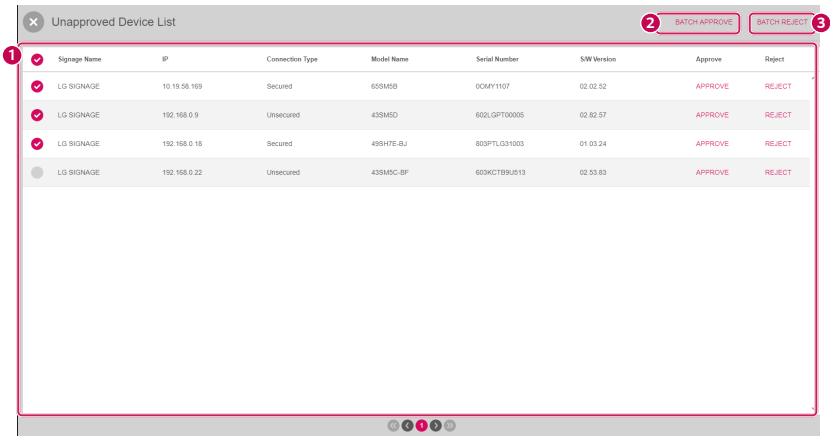


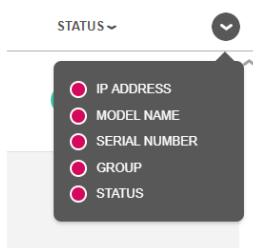
No.	Item	Description
1	List of Unapproved Devices	It shows a list of the unapproved devices connected to the Control+ server and the information about them, and you can reset approval or server settings via Approve/Reject.
2	Inclusive Approval	You can give an inclusive approval to the selected devices.
2	Inclusive Rejection	You can give an inclusive rejection of the selected devices.

NOTE

- The rejection-related feature is supported only for webOS 4.0 or higher.

Column Filter


Press the  button to activate the filter. You can customize the List View to adjust the columns.




Signage Popup

When you click one of the Signage components, the corresponding Signage information and Settings menu appears as a popup.

Information

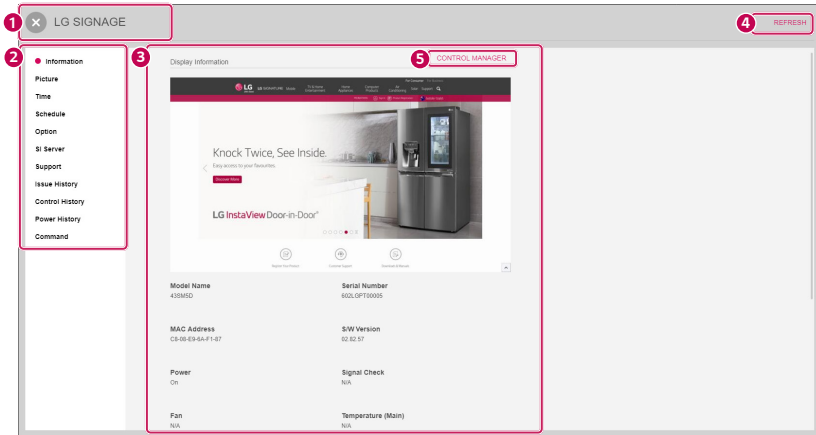

No.	Description
1	Show the Signage Name, and you can change the name by clicking it.
2	Tabs to call the menu - [Information], [Picture], [Time], [Schedule], [Option], [SI Server], [Support], [Issue History], [Control History], [Power History], and [Command]
3	It shows the thumbnail of the display connected to the Signage and the information about the display. - Information: [Model Name], [Serial Number], [MAC Address], [SW Version], [Power], [Signal Check], [Fan], [Temperature] (Main, Top End, Bottom End, PSU), [Door], [BLU], and [Pixel Sensor]
4	Click [REFRESH] to update the current value.
5	If the display supports "Control Manager," the [CONTROL MANAGER] button will be activated, and when you click it, the Control Manager will be displayed in a new window.

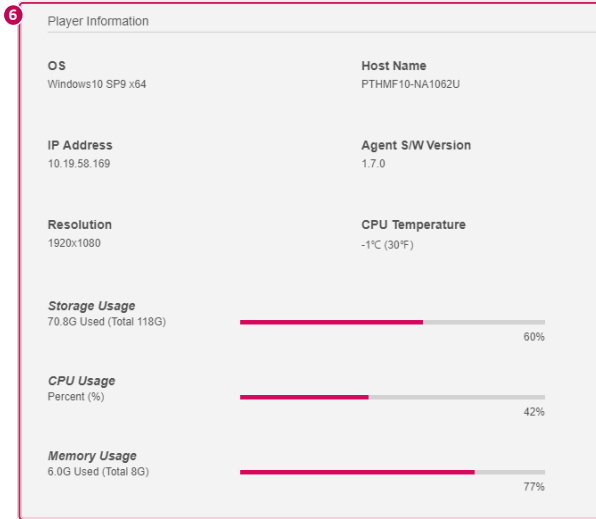

No.	Description
6	<p>When a Signage product is connected to the set-top box, the "Player Information" screen will appear and show information on the player.</p> <p>- Information: OS, Host Name, IP Address, Agent S/W Version, Resolution, CPU Temperature, Storage Usage, CPU Usage, Memory Usage</p>

! NOTE


- When the status is displayed as Warning or Error in a set Trouble Notice, the word "Warning" or "Error" will blink under the Player Information.

7 Schedule

Template Name	Date	Time	
Night Mode	Mon, Wed, Fri	20 : 30	DELETE
Daily Mode	2018/11/30	10 : 30	DELETE

No.	Description
7	<p>When a template schedule is registered, it appears on the Player Information screen and shows the information about the registered template schedule.</p> <ul style="list-style-type: none"> - Information: Template Name, Date, Time

Picture

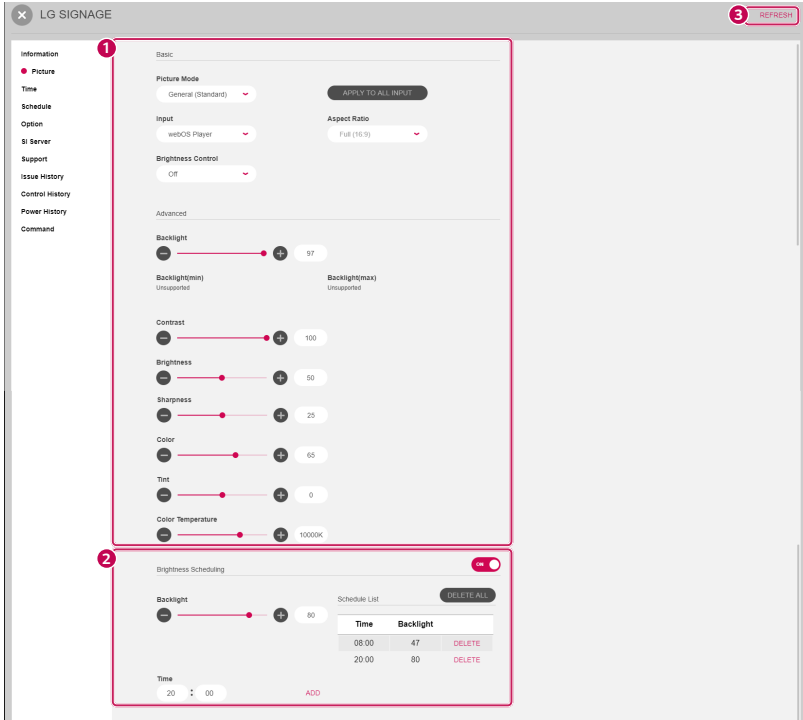

No.	Description
1	You can control items related to a picture. - Picture Mode, Input, Aspect Ratio, Brightness Control, Backlight, Contrast, Brightness, Sharpness, Color, Tint, and Color Temperature
2	Set the Brightness Schedule on and set the value and time of Backlight to add a picture to the list. The backlight value will be changed to the set value in accordance with the time shown on the list.
3	Click [REFRESH] to update the current value.

! NOTE

- If each item is not supported by the display, the message "Not Supported" will appear.
- You can view the items supported by each display in the release note.


Time

No.	Description
1	You can manually enter and apply the date and time. Click [SETTING BY PC TIME] to automatically apply the time of the PC.
2	Turn Daylight Saving Time on, set Start Time and End Time, and click [SET] to set Daylight Saving time.
3	Click [REFRESH] to update the current value.

! NOTE

- If time is not set in the display, the items of the date and time will be shown empty.
- If each item is not supported by the display, the message "Not Supported" will appear.
- You can view the items supported by each display in the release note.

Schedule

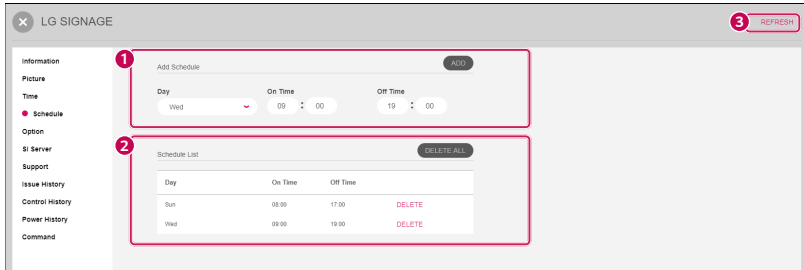


No.	Description
1	Set the day of the week and the time to be turned on and off, and click [ADD] to add the corresponding schedule.
2	The list of the schedule saved in the display is shown. - Click [DELETE ALL] to delete all schedules. - Click [DELETE] of each schedule to delete the corresponding schedule.
3	Click [REFRESH] to update the current value.

! NOTE

- If each item is not supported by the display, the message "Not Supported" will appear.
- You can view the items supported by each display in the release note.

Option

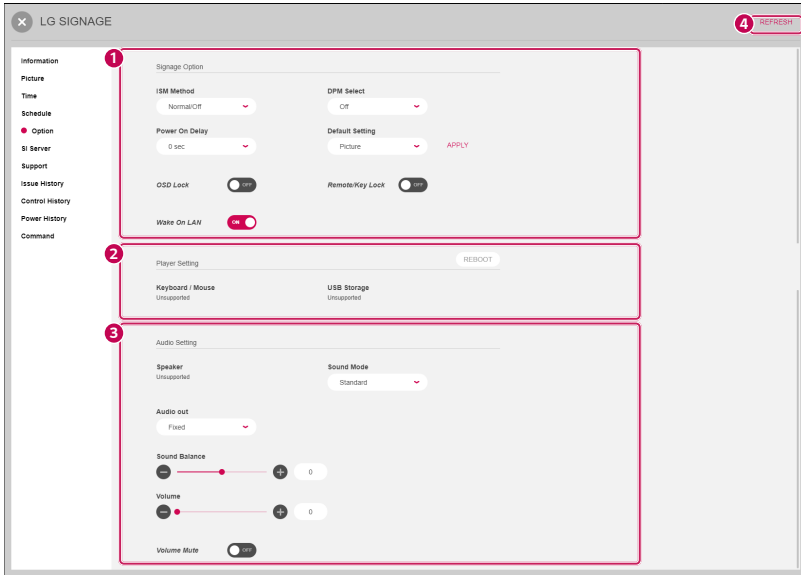

No.	Description
1	You can adjust settings related to Signage Options. - ISM Method, DPM Select, Power On Delay, Default Setting, OSD Lock, Remote/Key Lock, Wake On LAN
2	You can adjust settings related to Player. - Reboot, USB Port Control (keyboard/mouse, USB storage) - This is activated only when the Signage product is connected to the set-top box.
3	You can adjust settings related to Audio. - Speaker, Sound Mode, Sound Balance, Volume, and Volume Mute
4	Click [REFRESH] to update the current value.

! NOTE

- If each item is not supported by the display, the message "Not Supported" will appear.
- The keyboard and mouse in Player Setting are available only for a Signage product recognized by the HID Driver.
- You can view the items supported by each display in the release note.


SI Server

No.	Description
1	You can set the basic items of the SI server.
2	You can set the proxy server for the SI server.
3	Click [REFRESH] to update the current value.

! NOTE

- You need to click [APPLY] to apply the set value to a set, and after it is applied, the set will restart.
- After it is applied, the popup window will close for checking the device information.

Support

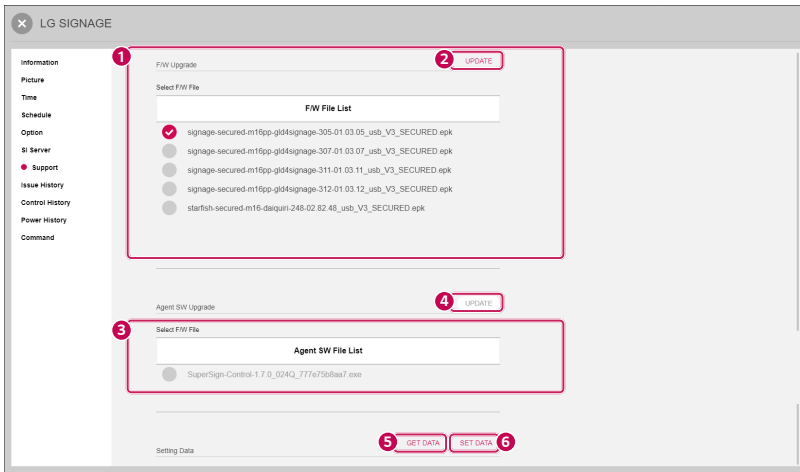

No.	Description
①	Select an FW file of the selected Signage product to update.
②	Click [UPDATE] to update the selected FW file to the Signage.
③	Select an Agent file to update from the selected Agent.
④	Click [UPDATE] to enable the selected Agent file to update the Agent.
⑤	Click [GET DATA] to save the set value applied to the selected Signage in the PC as a file.
⑥	Click [SET DATA] to apply the file of the set value saved in the PC to the selected Signage.

! NOTE

- A file containing a set value is saved in the format of *.tlx, and if the format is randomly modified, its functions will not work normally.
- If each item is not supported by the display, the buttons [UPDATE], [GET DATA] and [SET DATA] will be inactivated.
- Only when the Agent is selected, the item of the Agent update will be activated.
- You can view the items supported by each display in the release note.

Issue History

The screenshot displays the 'Issue History' section of the LG SIGNAGE interface. The main content area shows a table with the following data:

Signage Name (IP)	Group	Type	Issue	Status	Occurred time
L.G. SIGNAGE (10.19.58.95)	Unassigned	Display	Signal Check	Error	Nov 15, 2018, 2:02 PM
L.G. SIGNAGE (10.19.58.95)	Unassigned	Display	Signal Check	OK	Nov 15, 2018, 2:00 PM
L.G. SIGNAGE (10.19.58.95)	Unassigned	Display	Signal Check	Error	Nov 15, 2018, 2:00 PM
L.G. SIGNAGE (10.19.58.95)	Unassigned	Display	Signal Check	Error	Nov 15, 2018, 11:21 AM
L.G. SIGNAGE (10.19.58.95)	Unassigned	Display	Signal Check	OK	Nov 15, 2018, 10:21 AM
L.G. SIGNAGE (10.19.58.95)	Unassigned	Display	Signal Check	Error	Nov 15, 2018, 10:17 AM

Numbered callouts in the image indicate: 1. The table area; 2. The occurrence period dropdown menu (set to 'Today'); 3. The items per page dropdown menu (set to '10'); 4. The REFRESH button.

No.	Description
1	You can view the Issue History that occurs in the Signage product. - Signage Name (IP), Group, Type, Issue, Status and Occurred Time will appear.
2	You can set the occurrence period of histories to be displayed. - You can set Today, Last 7 Days, Last 30 Days or Last 100 Days.
3	You can set the number of histories shown on one screen. - 10, 25, or 100 items
4	Click [REFRESH] to update the current value.

NOTE

- If "..." is displayed because of the small space between items, hover over each item to view the content of the item in a tooltip.
- The history remains saved for up to 100 days.

Control History

The screenshot shows the 'Control History' section of the LG SIGNAGE interface. The table contains the following data:


Signage Name (IP)	Group	Control By	Control (Data Code)	Result	Occurred time
L.O.SIGNAGE (10.10.50.80)	Unassigned	admin	Daylight Saving	OK	Nov 15, 2018, 2:03 PM
L.O.SIGNAGE (10.10.50.80)	Unassigned	admin	Daylight Saving	OK	Nov 15, 2018, 2:03 PM
L.O.SIGNAGE (10.10.50.80)	Unassigned	admin	Time Setting 2 L.	OK	Nov 15, 2018, 2:03 PM
L.O.SIGNAGE (10.10.50.80)	Unassigned	admin	Time Setting 1 L.	OK	Nov 15, 2018, 2:03 PM
L.O.SIGNAGE (10.10.50.80)	Unassigned	admin	Schedule List (1.	OK	Nov 15, 2018, 2:02 PM
L.O.SIGNAGE (10.10.50.80)	Unassigned	admin	Schedule List (0.	OK	Nov 15, 2018, 2:02 PM
L.O.SIGNAGE (10.10.50.80)	Unassigned	admin	Brightness Sca.	OK	Nov 15, 2018, 2:02 PM
L.O.SIGNAGE (10.10.50.80)	Unassigned	admin	Brightness Sca.	Errr	Nov 15, 2018, 2:02 PM

No.	Description
1	You can view the Control History that occurs in the Signage product. - Signage Name (IP), Group, Type, Issue, Status and Occurred Time will appear.
2	You can set the occurrence period of histories to be displayed. - You can set Today, Last 7 Days, Last 30 Days or Last 100 Days.
3	You can set the number of histories shown on one screen. - 10, 25, or 100 items
4	Click [REFRESH] to update the current value.

NOTE

- If "... " is displayed because of the small space between items, hover over each item to view the content of the item in a tooltip.
- If you set a history period, it will be simultaneously applied to [Top 10 Issue Signage], [Issue History], [Control History] and [Power History].
- The history remains saved for up to 100 days.

Power history

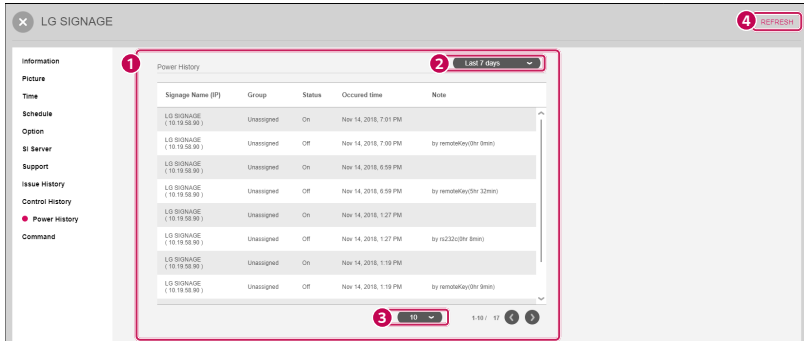

No.	Description
1	You can view the Power History that occurs in the Signage product. - Signage Name (IP), Group, Status, Occurred Time, and Note will appear.
2	You can set the occurrence period of histories to be displayed. - You can set Today, Last 7 Days, Last 30 Days or Last 100 Days.
3	You can set the number of histories shown on one screen. - 10, 25, or 100 items
4	Click [REFRESH] to update the current value.

NOTE

- If "..." is displayed because of the small space between items, hover over each item to view the content of the item in a tooltip.
- If an item is not supported by the display, it will be indicated as "Not Supported."
- When the time of the display differs from that of the server, some items may not be displayed.
- You can check whether the support is provided by each display on the release note.

Command




No.	Description
1	Enter a command to be transmitted to the Signage, and click [Send]. (e.g., ka 01 ff)
2	A response from the Signage product to the transmitted command will appear.

! NOTE


- If a command not supported by the connected Signage is transmitted through an Agent, the connection with the display may be terminated temporarily.
- If a command with a SetID of "00" is transmitted to a connected Signage product through an agent, the response value will be indicated as "NONE."

Multi Control

This function is to control several Signage products at once.

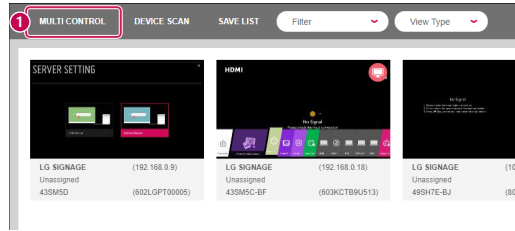

No.	Description
1	Click [MULTI CONTROL] to show a controllable menu and the menu to select a Signage to control.

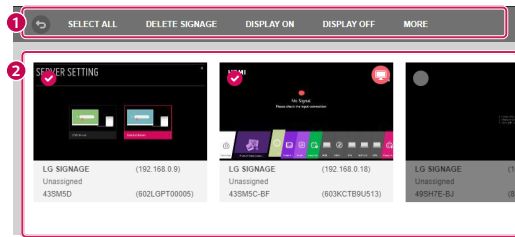


No.	Description
1	<p>The Multi Control function provides menus including [Back], [SELECT ALL], [DELETE SIGNAGE], [DISPLAY ON], [DISPLAY OFF] and [MORE].</p> <ul style="list-style-type: none"> - [SELECT ALL] and [DESELECT ALL]: You can select/deselect all Signages. - [DELETE SIGNAGE]: You can delete a selected Signage from the Signage list. <ul style="list-style-type: none"> * You can view and restore the deleted Signages at the [Deleted Signage] tab of the Settings menu. - [DISPLAY ON] and [DISPLAY OFF]: You can turn on/off the power supply for the selected monitor. <ul style="list-style-type: none"> * When the [DISPLAY ON] feature works, a device directly connected to the SuperSign Control+ works via WOL. A device connected through the Agent works via RS232C. - [MORE]: You can view the information about the selected Signages and the adjustment menus provided by each Signage.
2	You can select a Signage to control.

Multi Signage Popup


Click [Multi Control] on the Signage Management screen, select the Signages, and click [More] to show the Multi Signage popup.

Information

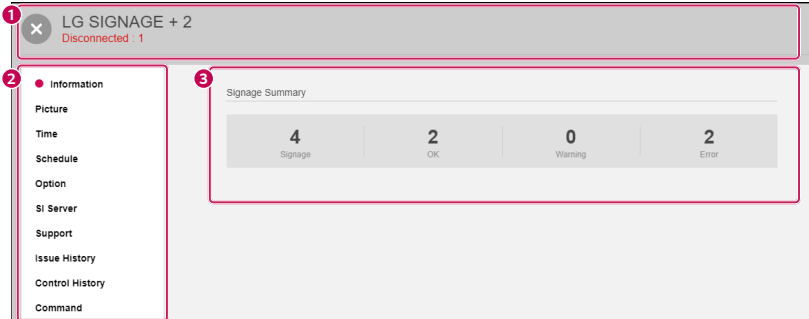

No.	Description
1	The names of the Signages are displayed. - The name of the representative Signage (the first one) and the number of the other Signage products are shown. - If there is a disconnected Signage among the selected Signage products, the number of the relevant Signage products is indicated on a bottom side.
2	Tabs to call the menu - Information, Picture, Time, Schedule, Option, SI Server, Support, Issue History, Control History, and Command
3	It shows the summary information on the selected Signage products.

Picture

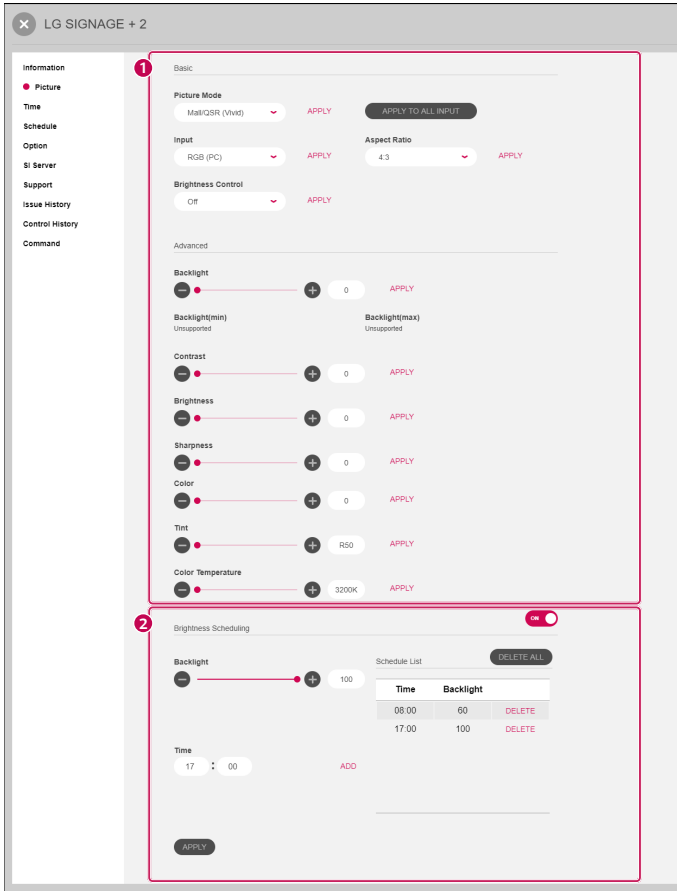

No.	Description
1	You can control items related to a picture. - Picture Mode, Input, Aspect Ratio, Brightness Control, Backlight, Contrast, Brightness, Sharpness, Color, Tint, and Color Temperature
2	Set the Brightness Schedule on and set the value and time of Backlight to add a picture to the list. The backlight value will be changed to the set value in accordance with the time shown on the list.

NOTE

- Each item of the settings is applied when [APPLY] is clicked.
- Applicable items may vary according to the display.
- You can view the items supported by each display in the release note.

Time


No.	Description
1	You can manually enter and apply the date and time. Click [SETTING BY PC TIME] to automatically apply the time of the PC.
2	Turn Daylight Saving Time on, set Start Time and End Time, and click [APPLY] to set Daylight Saving time.

! NOTE

- Applicable items may vary according to the display.
- You can view the items supported by each display in the release note.

Schedule

When multi control is to be performed on the Signages of the same platform

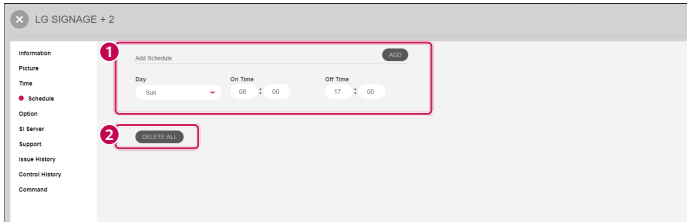

No.	Description
①	Set the day of the week and the time to be turned on and off, and click [ADD] to add the corresponding schedule.
②	Click [DELETE ALL] to delete all schedules.

When Signages having different platforms perform a multi control

Non webOS 3.2


webOS 3.2

Created on the top end are the General (Non webOS 3.2) button and the webOS 3.2 button. When each button is clicked, a schedule screen fitting the platform is shown.

! **NOTE**

- Applicable items may vary according to the display.
- You can view the items supported by each display in the release note.

Option

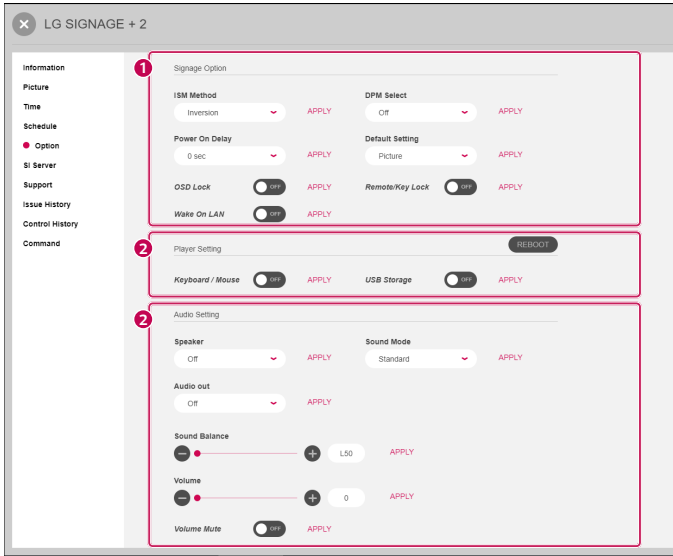

No.	Description
1	You can adjust settings related to Signage Options. - ISM Method, DPM Select, Power On Delay, Default Setting, OSD Lock, Remote/Key Lock, Wake On LAN
2	You can adjust settings related to Player. - Reboot, USB Port Control (keyboard/mouse, USB storage)
3	You can adjust settings related to Audio. - Speaker, Sound Mode, Sound Balance, Volume, and Volume Mute

NOTE

- Each item of the settings is applied when [APPLY] is clicked.
- Applicable items may vary according to the display.
- You can view the items supported by each display in the release note.
- The Keyboard/Mouse of the Player Settings are applied only to a Signage recognized as an HID Driver.


SI Server

No.	Description
1	You can set the basic items of the SI server.
2	You can set the proxy server for the SI server.

! NOTE

- You need to click [APPLY] to apply the set value to a set, and after it is applied, the set will restart.
- After it is applied, the popup window will close for checking the device information.

Support

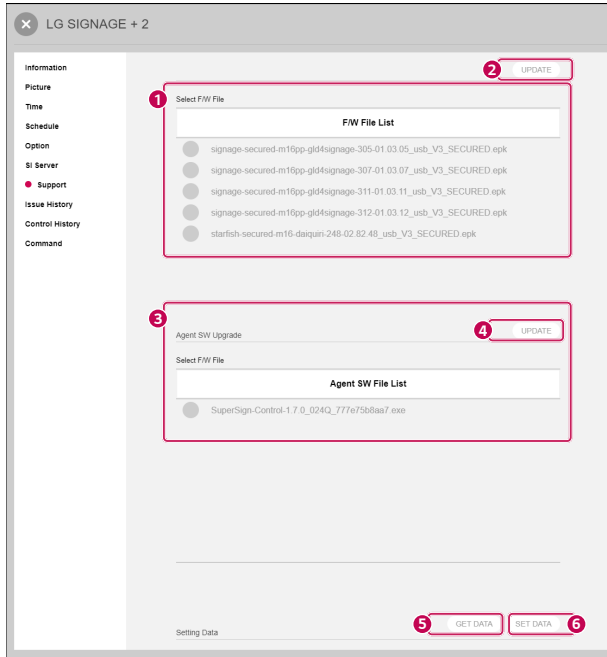

No.	Description
1	Select an FW file of the selected Signage product to update.
2	Click [UPDATE] to update the selected FW file to the Signage.
3	Select an Agent file to update from the selected Agent.
4	Click [UPDATE] to enable the selected Agent file to update the Agent.
5	The [GET DATA] function is available only when you have selected one Signage.
6	Click [SET DATA] to apply the set value to all Signages you have selected.

! NOTE

- Applicable items may vary according to the display.
- Only when the Agent is selected, the item of the Agent update will be activated.
- You can view the items supported by each display in the release note.

Issue History

The screenshot shows the 'Issue History' section of the LG SIGNAGE + 2 interface. A table lists the following data:


Signage Name (IP)	Group	Type	Issue	Status	Occurred time
LG SIGNAGE (192.168.0.0)	Unassigned	Display	Signal Check	OK	Nov 15, 2016, 2:13 PM
LG SIGNAGE (192.168.0.0)	Unassigned	Display	Signal Check	Error	Nov 15, 2016, 2:02 PM
LG SIGNAGE (192.168.0.0)	Unassigned	Display	Signal Check	Error	Nov 15, 2016, 2:01 PM
LG SIGNAGE (192.168.0.0)	Unassigned	Display	Signal Check	OK	Nov 15, 2016, 2:00 PM
LG SIGNAGE (192.168.0.0)	Unassigned	Display	Signal Check	Error	Nov 15, 2016, 2:00 PM
LG SIGNAGE (192.168.0.0)	Unassigned	Display	Signal Check	Error	Nov 15, 2016, 2:00 PM
LG SIGNAGE (192.168.0.0)	Unassigned	Display	Signal Check	OK	Nov 15, 2016, 1:37 PM
LG SIGNAGE (192.168.0.0)	Unassigned	Display	Signal Check	Error	Nov 15, 2016, 1:37 PM

No.	Description
1	You can view the Issue History that occurs in the Signage product. - Signage Name (IP), Group, Type, Issue, Status and Occurred Time will appear.
2	You can set the occurrence period of histories to be displayed. - You can set Today, Last 7 Days, or Last 30 Days.
3	You can set the number of histories shown on one screen. - 10, 25, or 100 items
4	Click [REFRESH] to update the current value.

NOTE

- If "... " is displayed because of the small space between items, hover over each item to view the content of the item in a tooltip.

Control History

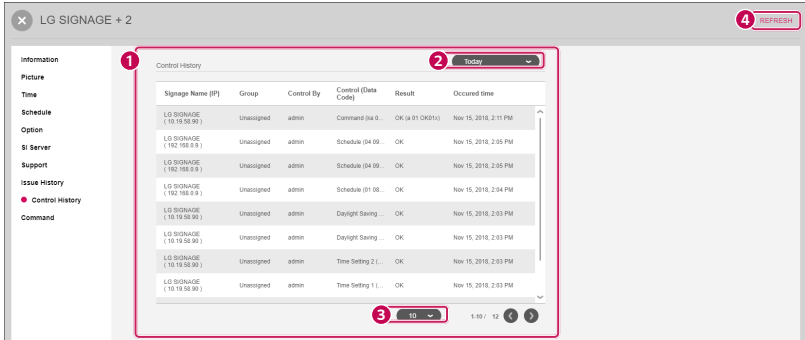


No.	Description
1	You can view the Control History that occurs in the Signage product. - Signage Name (IP), Group, Control By, Control (Data Code), Result, and Occurred Time will appear.
2	You can set the occurrence period of histories to be displayed. - You can set Today, Last 7 Days, Last 30 Days or Last 100 Days.
3	You can set the number of histories shown on one screen. - 10, 25, or 100 items
4	Click [REFRESH] to update the current value.

NOTE

- If "... " is displayed because of the small space between items, hover over each item to view the content of the item in a tooltip.
- Only the history of controlling through the SuperSign Control+ will appear.

Command

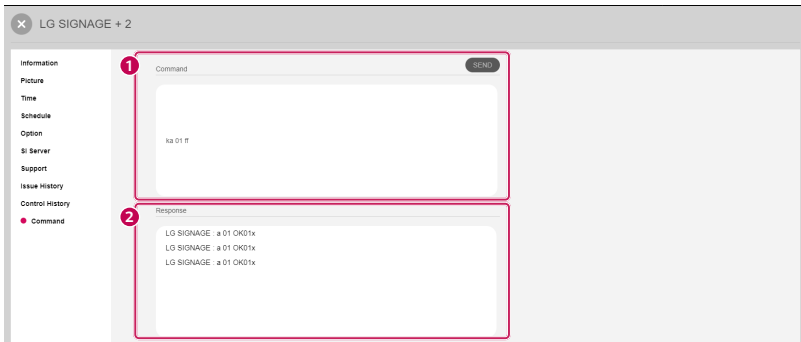


No.	Description
1	Enter a command to be transmitted to the Signage, and click [SEND]. (e.g, ka 01 ff)
2	A response from the Signage product to the transmitted command will appear.

! NOTE

- If a command not supported by the connected Signage is transmitted through an Agent, the connection with the display may be terminated temporarily.
- If a command with a SetID of "00" is transmitted to a connected Signage product through an agent, the response value will be indicated as "NONE."

Template

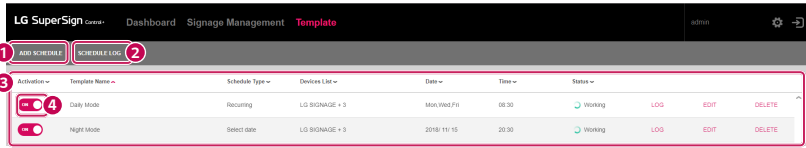

No.	Description
1	You can use [ADD SCHEDULE] to add a new template schedule.
2	You can view the template schedule log.
3	It displays the information about the currently created schedule. Via the Log, Delete, and Edit buttons, you can log, delete or edit the corresponding template schedule. - Information: Template Name, Schedule Type, Devices List, Date, Time, Status
4	You can activate/inactivate a schedule in accordance with the status of the activation on/off.

New Schedule

1 Schedule Type

Select date Recurring Immediately

Date: 2018/11/15 Time: 14 : 31

2 Devices List DELETE ALL EDIT


Signage Name	Group	IP	Delete
LG SIGNAGE	Unassigned	192.168.0.22	
LG SIGNAGE	Unassigned	192.168.0.9	
LG SIGNAGE	Unassigned	192.168.0.18	
LG SIGNAGE	Unassigned	10.19.58.90	

3 Template CREATE

Template Name	Delete
<input checked="" type="radio"/> Daily Mode VIEW	
<input type="radio"/> Night Mode VIEW	

No.	Description
1	You can select a type of the template schedule which will be newly registered.
2	You can add a Signage, where the corresponding schedule will be done, by editing.
3	You can create or add/delete a template.

Edit List of Devices

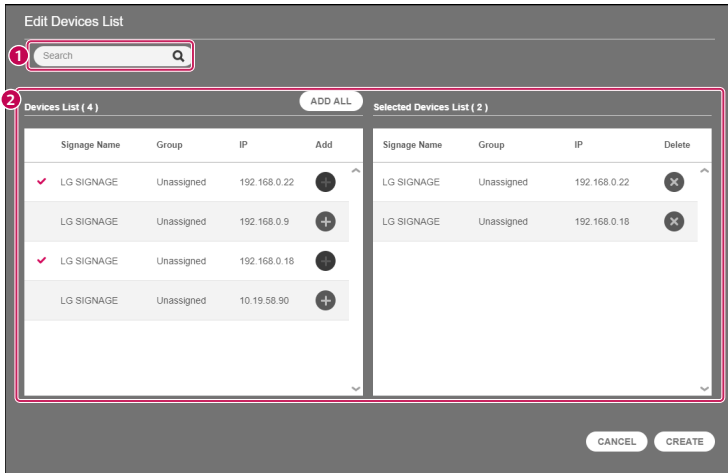


No.	Description
1	You can search for the desired Signage device through search. (See page 17 for "Keyword Search.")
2	It shows the list of all devices and the list of the selected devices.

Settings

Trouble Notice

You can set a reference value of a trouble notice of the player and the monitor for each group.

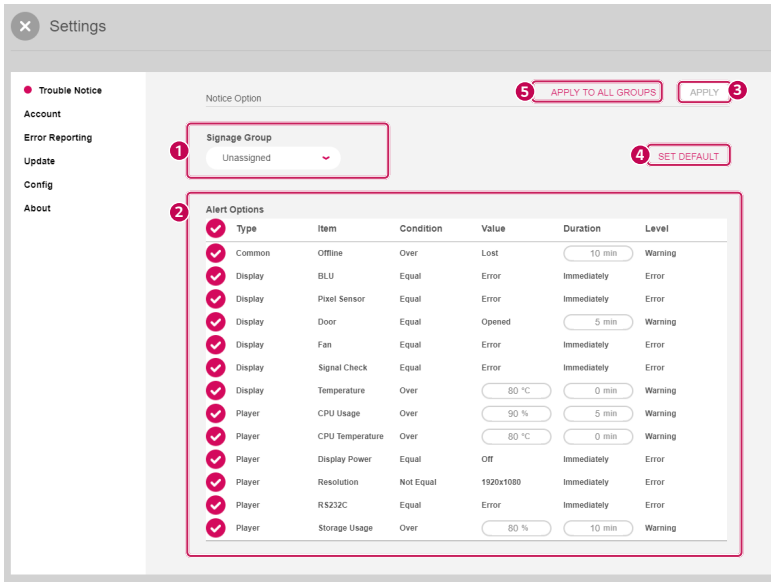

No.	Description
1	Select a group to set a Trouble Notice for.
2	The program shows Alert Options for the selected group. - Type, Item, Condition, Value, Duration, Level
3	Click [APPLY], and Alert Options coming under the selected group 2 will be applied.

4

The program changes Alert Options of the selected group into a default value.


Type	Item	Condition	Value	Period	Level
Common	Offline	Over	Lost	10 min.	Warning
Display	BLU	Equal	Error	Immediately	Error
Display	Pixel Sensor	Equal	Error	Immediately	Error
Display	Door	Equal	Error	5 min.	Warning
Display	Fan	Equal	Error	Immediately	Error
Display	Signal Check	Equal	Error	Immediately	Error
Display	Temperature	Over	80°C	0 min.	Warning
Player	CPU Usage	Over	90%	5 min.	Warning
Player	CPU Temperature	Over	80°C	0 min.	Warning
Player	Display Power	Equal	Error	Immediately	Error
Player	Resolution	Not Equal	1920 x 1080	Immediately	Error
Player	RS232C	Equal	Error	Immediately	Error
Player	Storage Usage	Over	80 %	10 min.	Warning

5

Click [APPLY TO ALL GROUPS], and Alert Options will be applied to all groups.

Account Management

This feature provides functions to generate, delete, and modify an account.

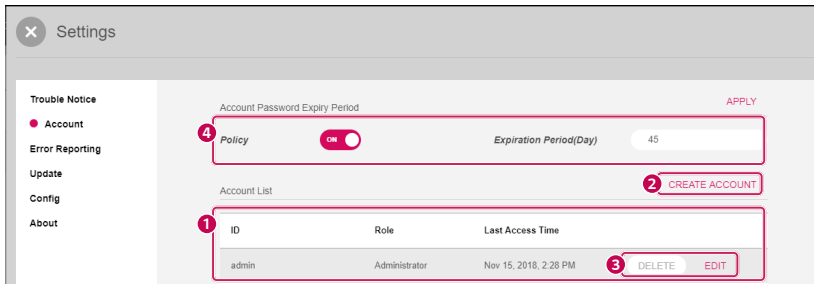

No.	Item	Description
1	Account List	This list shows the registered user account.
2	Create Account	Create an account. Only an account with the role of administrator can create an account.
3	Delete	Delete an account. Only an account with the role of administrator can delete other users' accounts.
	Edit	Change account information.
4	Account Password Expiry Period	You can set an account password expiry period. If Policy is on, the password expiry period can be set to between 7 days and 180 days.

NOTE

- Presence or absence of device control and template operation in accordance with the authority

Feature/Authority	Admin	Manager	Viewer
Dashboard	O	O	O
Display Information	O	O	O
Control Display	O	O	X
Control Player	O	O	X
Issue/Control/Power History	O	O	O
Remove Device	O	X	X
Trouble Notice	O	X	X
Error Reporting	O	X	X
Account Settings	O	X	X
Approve/Unapprove Device	O	X	X
Template	O	O	X

Create Account

Create an account. Only an account with the role of administrator can create an account.

No.	Item	Description
1	ID	Enter a user ID. (2-10 characters), required
2	Role	Select the user's role. (administrator, manager, or viewer)
3	Name	Enter a user name. (2-20 characters), required
4	Email	Enter the user's email. (2-255 characters), required
5	Password	Enter a user password. (6-12 characters), required
6	Confirm Password	Confirm a user password. (6-12 characters), required
7	Mobile Phone Number	Enter the user's mobile phone number. (2-20 characters)
8	Phone number	Enter the user's phone number. (2-20 characters)
9	Save/Cancel	[SAVE]: You can save the entered information and move to the parent menu. [CANCEL]: You can cancel the input of the information and move to the parent menu.

NOTE

- If a required item is not filled, no account is created.

Edit

Change the user information. To edit the account information, the password needs to be confirmed.

The Confirm Password window appears, and if you enter the password for the currently logged-on account and click Confirm, the window to edit the account will open.

! NOTE

- If a required item is not filled, the account information cannot be modified.
- If you modify the information, you must also enter the password and confirm.
- Click [CANCEL] to cancel editing and return to the Settings screen.
- The areas available for modification differ by ID/role.

ID/Role	ID	Role
admin/administrator	X	O
ID entered by user/administrator	X	O
ID entered by user/manager	X	X
ID entered by user/viewer	X	X

- The parts of the name, email, password, phone number, and mobile phone number can be modified regardless of the ID and Role.
- The initially created account whose ID is admin and whose role is an administrator cannot be deleted. (The ID and Role cannot be modified)
- When the currently logged-on account modifies its own account information, the account will be logged out.
- The account of the administrator is able to edit the information about other accounts via the administrator password.

Error Reporting

When a Warning/Error of a Signage product managed by the SuperSign Control+ occurs, this function sets a subject server to notify the situation through the SNMP Trap and email.

No.	Item	Description
3	Sending Server (SMTP)	Enter the SMTP server address.
4	Port	Enter the port number.
5	Secured Connection (SSL)	Check in case of a secured connection. If you check Secured Connection, the port number will be automatically designated as 465. The Port Input window will be inactivated.
6	Sender Address	Enter the sender's email address.
7	ID	Enter the user's email ID.
8	Password	Enter a user password.
9	Validation	If all items are correctly entered, "Account Setting Test" will be activated. When you click [ACCOUNT SETTING TEST], a validation email is sent to the entered email address, and the validation email is saved.

- Click [EDIT] **1**, **2** to enter the server IP and save it.
- Report the error to the designated server IP through an SNMP Trap message.
- The Specifications of the SXNMP Trap Message are as follows.

LGE Oid: 1.3.6.1.4.1.7824

community: lgecommer

Category	OID	Type	Name	Values
Common	1.3.6.1.4.1.7824.300.3.1000	snmp.ObjectType. OctetString	connection	'disconnected'
	1.3.6.1.4.1.7824.300.3.1007	snmp.ObjectType. OctetString	offline	'lost'
Player	1.3.6.1.4.1.7824.300.3.1	snmp.ObjectType. OctetString	display power	'off'
	1.3.6.1.4.1.7824.300.3.1001	snmp.ObjectType. Integer	cpu temperature	value in °C
	1.3.6.1.4.1.7824.300.3.1002	snmp.ObjectType. Integer	cpu usage	%
	1.3.6.1.4.1.7824.300.3.1004	snmp.ObjectType. OctetString	resolution	widthxheight (e.g., 1920x1080)
	1.3.6.1.4.1.7824.300.3.1005	snmp.ObjectType. Integer	storage	%
Display	1.3.6.1.4.1.7824.300.3.25	snmp.ObjectType. OctetString	signal check	'error'
	1.3.6.1.4.1.7824.300.3.26	snmp.ObjectType. Integer	board temperature	value in °C
	1.3.6.1.4.1.7824.300.3.30	snmp.ObjectType. OctetString	fan status	'error'
	1.3.6.1.4.1.7824.300.3.32	snmp.ObjectType. OctetString	blu	'error'
	1.3.6.1.4.1.7824.300.3.2001	snmp.ObjectType. OctetString	checkscreen (pixel sensor)	'error'
	1.3.6.1.4.1.7824.300.3.2002	snmp.ObjectType. OctetString	door	'opened'


NOTE

- The installed NMS Server may not work due to an external network or firewall.
- If not all items are entered, the [ACCOUNT SETTING TEST] button will not be activated.

CAUTION

- If the SMTP server is not set, the "Error Reporting" email will not be sent.

Update

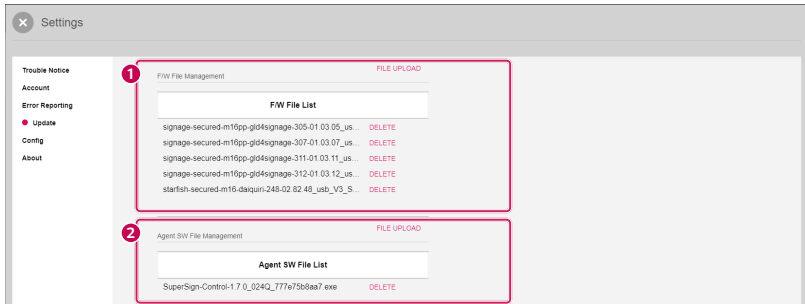

No.	Description
1	You can check the Agent update version provided by the corresponding IP by using [Agent Update].
2	You can upload an Agent file to the Control+ server by using [FILE UPLOAD] and confirm/delete it in the list of the Agent.

Config

Settings

Trouble Notice

Account

Error Reporting

Update

● Config

About

1

Config setting page

Browser Port

3443 SAVE

Device Port

3333 SAVE

File Server IP & Port

10.19.58.169 3000 SAVE

Screenshot Duration

00 : 00 : 20 SAVE

Monitoring Duration


00 : 01 : 00 SAVE

No.	Description
1	<p>After entering details for each item, you can check the details and apply them or cancel the application through a popup which appears when you click [Save].</p> <ul style="list-style-type: none"> - [Browser Port]: Enter the browser port. (between 0 and 65535) - [Device Port]: Enter the device port. (between 0 and 65535) - [File Server IP & Port]: Enter the file server IP and port number. (The IP can be entered in IPv4 and IPv6 formats/the port number must be between 0 and 65535.) - [Screenshot Duration]: Enter the screenshot duration. (The cycle needs to be 20 seconds or longer.) - [Monitoring Duration]: Enter the monitoring duration. (The cycle needs to be 60 seconds or longer.) - When the config is entered, the Valid/Invalid messages will be outputted for the available or unavailable Config.

 **CAUTION**

- If there are several network adapters on the PC with the SuperSign Control+ Manager installed, you must enter the IP of the adapter you want to use in the File Server IP & Port field.

Information

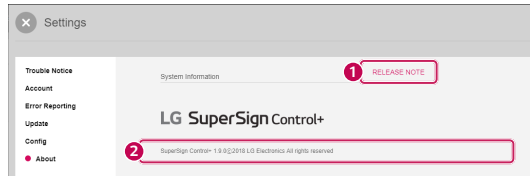

No.	Description
1	You can check the release note of the SuperSign Control+.
2	You can check the version information on the SuperSign Control+.

AGENT FEATURES

Agent Setup

1 Server IP Address 192.168.1.115 APPLY

2 Set ID 1 APPLY

3 RS-232C Port COM1

Agent Status 4 CHECK

5 Monitor Connection Status OK

Diagnosis S/W Status OK

Server Connection Status Approved

No.	Description
1	You can set the IP of the Server.
2	You can set the Set ID.
3	You can determine the RS-232C port.
4	Click [CHECK] to inspect the status of the Agent.
5	You can check the status of each item. <ul style="list-style-type: none"> - Monitor Connection Status: Check if it is connected to the LG Signage. - Diagnosis S/W Status: Check if the monitoring items normally work. - Server Connection Status: Check if it is connected to the SuperSign Control+ Server.

Information on Used Port

The SuperSign Control+ Server and Player are connected through the ports below.

- 3443: Server Open
- 3333: Player Unsecured Access Server
- 3334: Player Secured Access Server
- 3000: File Transmission Server
- 6379: redis DB
- 5433: PostgreSQL DB



To obtain the source code under GPL, LGPL, MPL, and other open source licenses, that is contained in this product, please visit <http://opensource.lge.com>. In addition to the source code, all referred license terms, warranty disclaimers and copyright notices are available for download. LG Electronics will also provide open source code to you on CD-ROM for a charge covering the cost of performing such distribution (such as the cost of media, shipping, and handling) upon email request to opensource@lge.com. This offer is valid for a period of three years after our last shipment of this product. This offer is valid to anyone in receipt of this information.